


The Bead Shop

Pass nylon coated wire up through
the centre hole into the inside
of the calotte.

Flatten a crimp bead onto the wire.



Allow the Flattened crimp
to sit on the inside of the calotte.

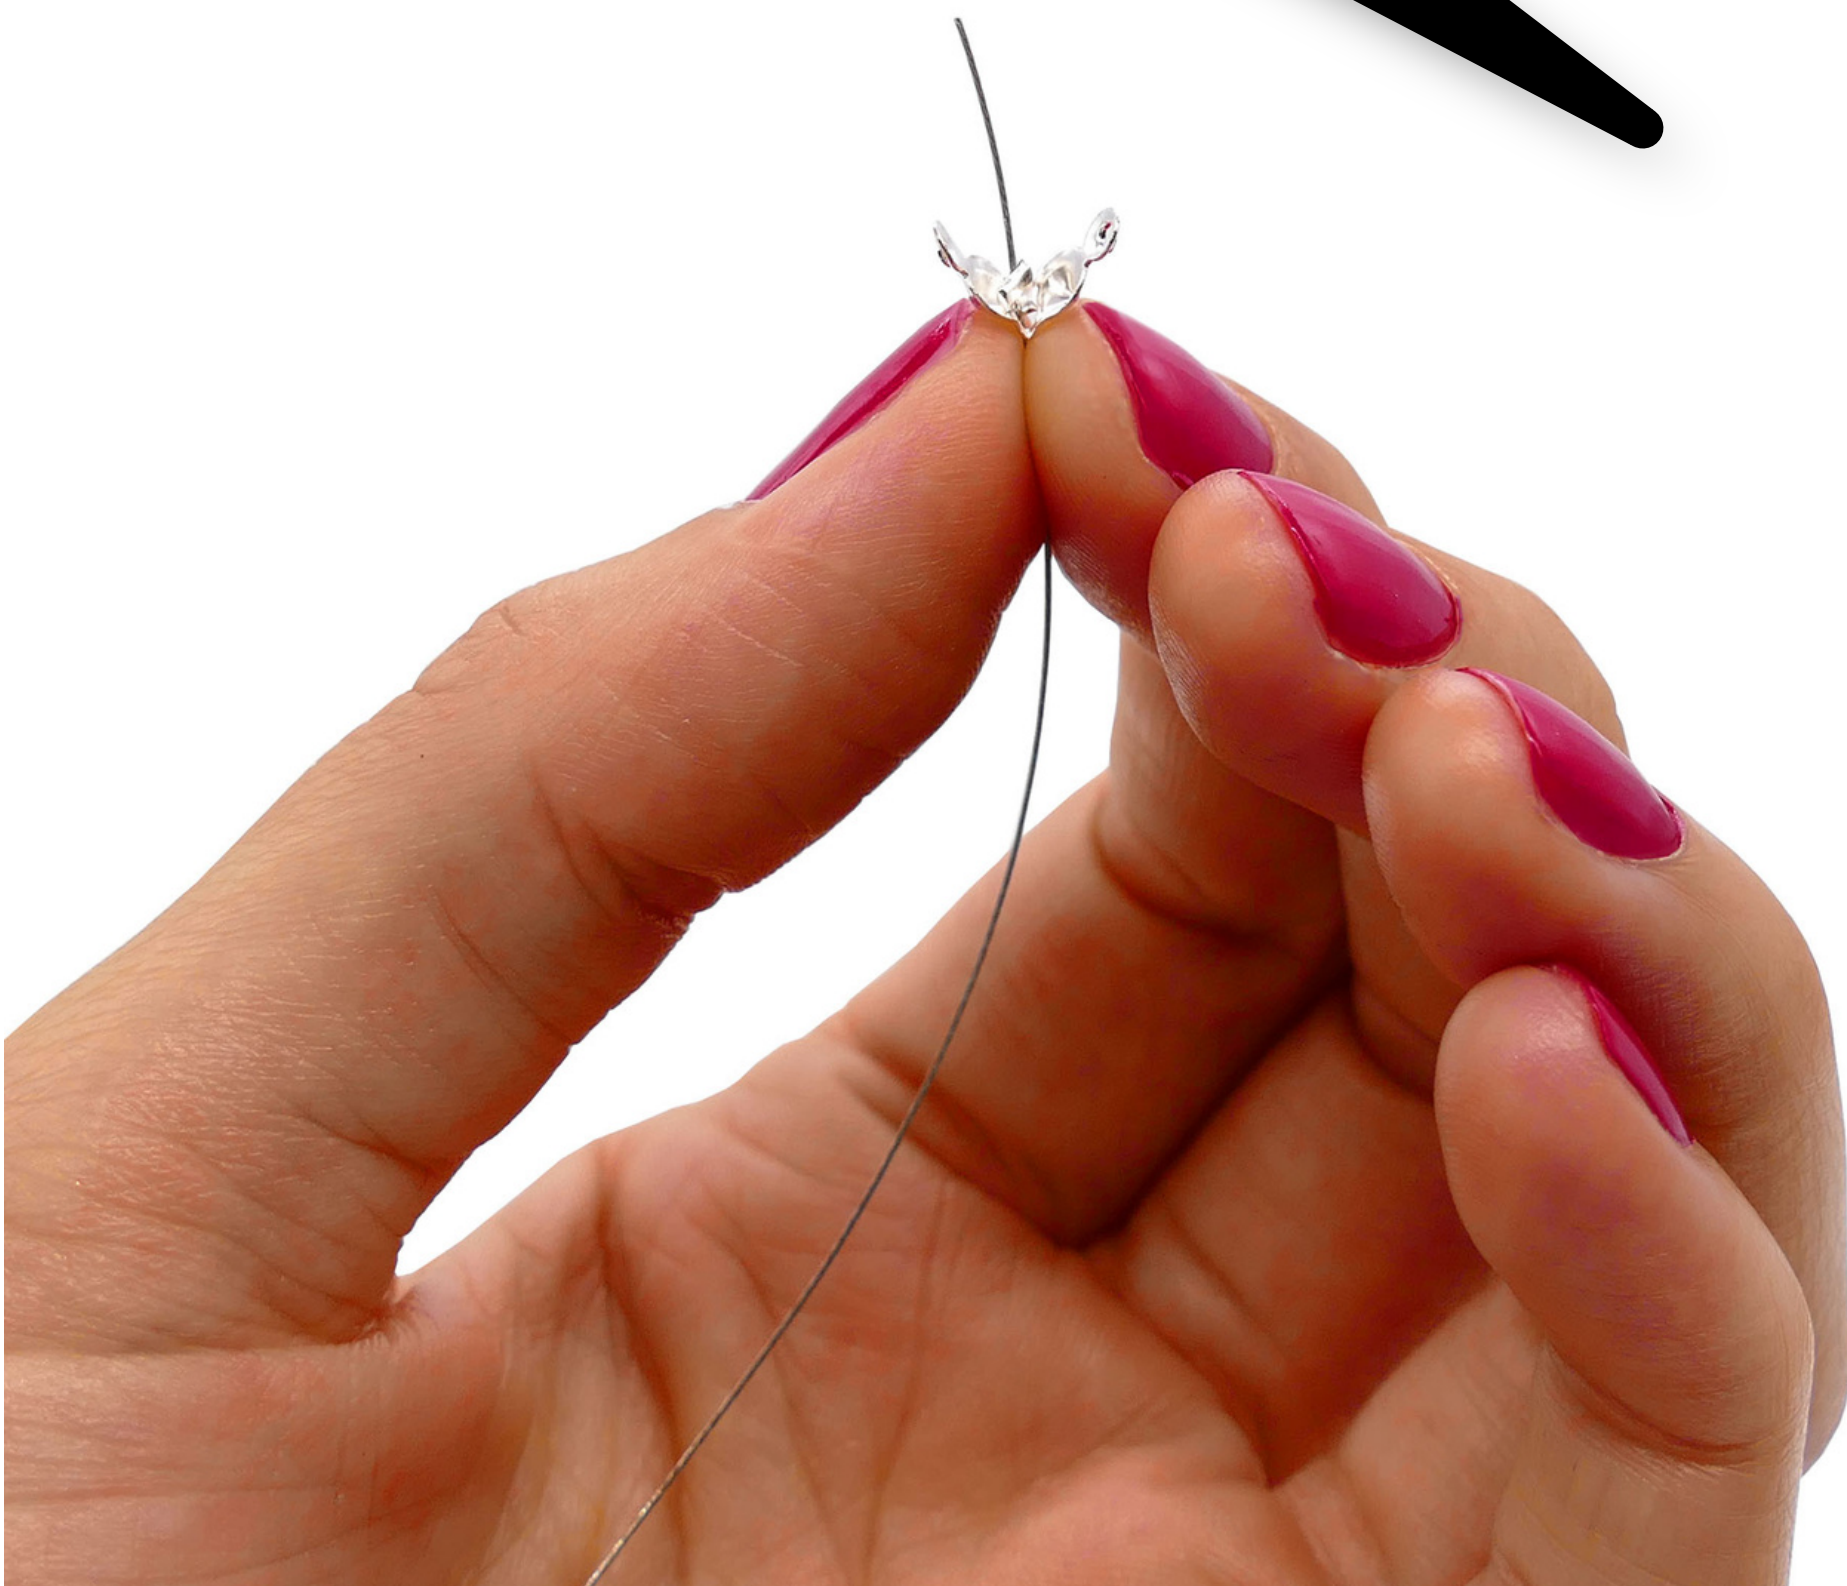

Close the calotte around the crimp
bead using flat nose pliers.

Use jewellery cutters to trim off
any excess wire.



Use jump rings to attach the end
fasteners to your calottes
- clasp & extension chain.



Grip the ring at the split -
twist one side towards you
and the other away from you.
To close, reverse this process.

Your end fastenings
should look like this.

Calotte > Jump Ring > Clasp

Calotte > Jump Ring > Extension

